



# Dimension L \* W \* H 300 \* 85 \* 41 (1U) mm 11.8 \* 3.35 \* 1.61 (1U) inch

# Parallel R c SU us A S CBCE

#### **■** Features

- Charger for lead-acid batteries (Gel, flooded and AGM) and Li-ion batteries (lithium iron and lithium manganese)
- Built-in default 3 stage charging curves and programmable curve
- Built-in I<sup>2</sup>C interface, PMBus protocol
- · Output voltage and current programmable
- Universal AC input / Full range (Withstand 300VAC surge input for 5 seconds)
- · Built-in active PFC function
- · Forced air cooling by built-in DC fan
- Built-in OR-ing FET, support hot swap (hot plug)
- Active current sharing up to 8000W for one 19" rack shelf
- Protections: Battery under voltage / Battery no connection
   / Short circuit / Over voltage / Over temperature
- · Optional conformal coating
- 5 years warranty

#### Certificates

Safety: UL/EN/IEC 60950-1

• EMC: EN 55022 / 55024

 
## Applications

- Large scale DC UPS or emergency backup system
- · Marine battery charger module
- Electric scooter or vehicle charger station
- · Wastewater treatment system
- · Electrolysis system

## Description

RCB-1600 series is a single output 1600W AC/DC charger with 1U low profile (41mm). It is an intelligent charger with embedded charging curves which are programmable; users are also able to adjust the charging voltage and current via the built-in potentiometer, output programmable functions, or PMBus to charge different types of batteries, such as lead-acid batteries and li-ion batteries. Various protection mechanisms as well as the temperature compensation function are provided to assure the normal and safe operations. The rack-mountable attribute allows RCB-1600 to perfectly suit the charging, backup or constant current source applications exploiting the rack architecture or central management.

### **■** Model Encoding



X Note: 19" rack shelf, RHP-1U, available.




## 1600W Rack Mountable Front End Battery Charger

#### **SPECIFICATION**

MODEL		RCB-1600-12	RCB-1600-24	RCB-1600-48		
ОИТРИТ	BOOST CHARGE VOLTAGE(Vboost)(default)	14.4V	28.8V	57.6V		
	FLOAT CHARGE VOLTAGE(Vfloat)(default)	13.8V	27.6V	55.2V		
	, ,, ,	0 ~ 100A	0 ~ 55A	0 ~ 27.5A		
	CONSTANT CURRENT(CC)(default)		55A	27.5A		
	RATED POWER	1440W	1584W	1584W		
		By built-in potentiometer, SVR		170 10		
	VOLTAGE ADJ. RANGE	11.5 ~ 15V	23.5 ~ 30V	47.5 ~ 58.8V		
	RECOMMENDED BATTERY CAPACITY(AMP HOURS) Note.3	330 ~ 1000Ah	180 ~ 550Ah	90 ~ 270Ah		
	LEAKAGE CURRENT FROM BATTERY (Typ.)	<1mA				
	, , , ,	90 ~ 264VAC 127 ~ 370VDC				
	FREQUENCY RANGE	47 ~ 63Hz				
	POWER FACTOR (Typ.)	0.97/230VAC at full load				
INPUT	EFFICIENCY (Typ.)	90.5%	92%	93%		
	AC CURRENT (Typ.) Note.4		15A/115VAC 8.5A/230VAC			
	INRUSH CURRENT (Typ.)	COLD START 35A/230VAC	3.070200770			
	LEAKAGE CURRENT	<1.5mA/230VAC <1.5mA/230VAC				
PROTECTION	LEARAGE CORRENT		04.5 07.57	00 751/		
	OVER VOLTAGE	15.75 ~ 18.75V  Protection type: Shut down o/p voltage, re-	31.5 ~ 37.5V -power on to recover	63 ~ 75V		
	OVER TEMPERATURE	Shut down o/p voltage, recovers automatically after temperature goes down				
	OUTPUT VOLTAGE PROGRAMMABLE(PV) Note 5	Adjustment of output voltage is allowable to 75 ~ 125% of nominal output voltage Please refer to the Function Manual.				
	OUTPUT CURRENT PROGRAMMABLE(PC) Note 5	Adjustment of output current is allowable to 20 ~ 100% of rated current				
FUNCTION	AUXILIARY POWER	5V @ 0.3A, 12V @ 0.8A				
FUNCTION	REMOTE ON-OFF CONTROL	By electrical signal or dry contact Power ON:short Power OFF:open. Please refer to the Function Manual				
	TEMPERATURE COMPENSATION					
	DC OK SIGNAL	The isolated TTL signal out. Please refer to the Installation Manual				
	AC OK SIGNAL	The isolated TTL signal out. Please refer to the Installation Manual				
	WORKING TEMP.	-30 ~ +70°C (Refer to "Derating Curve")				
	WORKING HUMIDITY	20 ~ 90% RH non-condensing				
ENVIRONMENT	STORAGE TEMP., HUMIDITY	-40 ~ +85°C, 10 ~ 95% RH				
	TEMP. COEFFICIENT	±0.03%/°C (0~50°C)				
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes				
	SAFETY STANDARDS	UL60950-1, TUV EN60950-1 approved				
SAFETY &	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:2KVAC O/P-FG:1.5KVAC (0.5KVAC for 12V)				
EMC	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 500VDC / 25°C / 70% RH				
(Note 6)	EMC EMISSION	Compliance to EN55022 (CISPR22) Conduction Class B, Radiation Class A; EN61000-3-2,-3				
	EMC IMMUNITY	Compliance to EN61000-4-2,3,4,5,6,8,11, EN	N61000-6-2 (EN50082-2), light industry level, o	criteria A		
	MTBF	160.1K hrs min. Telcordia SR-332 (Bello	ore); 38.9K hrs min. MIL-HDBK-217F (2	5°C)		
OTHERS	DIMENSION	300*85*41mm (L*W*H)				
	PACKING	1.87Kg; 6pcs/12.2Kg/1.16CUFT				
NOTE	All parameters NOT special     This is MEAN WELL's sugg     Derating may be needed ur     PV/PC functions when user     The charger is considered a 360mm*360mm metal pla	ger specification may be required for different battery specification. Please contact battery vendor and MEAN WELL for details. specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature. L's suggested range. Please consult your battery manufacturer for their suggestions about maximum charging current limitation. eded under low input voltages. Please check the derating curve for more details. een users are not operating on PMBus. SVR functions when users are neither operating on PMBus nor using PV/PC. idered a component which will be installed into a final equipment. All the EMC tests are been executed by mounting the unit on netal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to tests, please refer to "EMI testing of component power supplies." (as available on http://www.meanwell.com)				



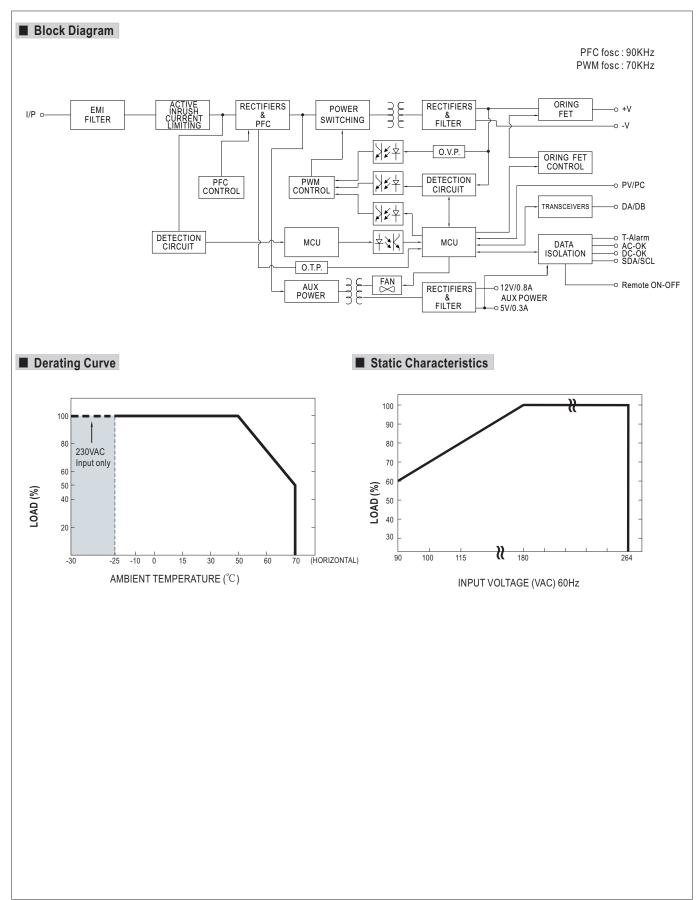



#### **■** Function Manual


#### 1.PMBus Communication Interface

\* RCB-1600 supports PMBus Rev. 1.1 with maximum 100KHz bus speed, allowing information reading, status monitoring, output trimming, etc. For details, please refer to the Installation Manual.

#### 2. Charging Curve

- % By factory default, this charger performs the default curve which can be programmed via PMBus.
- \*\* To charging curve, change to a 2 stage curve, a different curve frequently used for certain types of batteries in the industry, switch to PMBus, PV/PC or SVR control instead and so on, please refer to the Installation Manual.



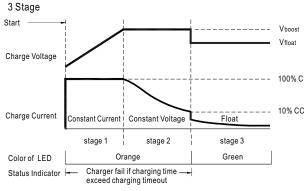


© Suitable for lead-acid batteries (flooded, Gel and AGM) and Li-ion batteries (lithium iron and lithium manganese).

#### © Embedded 3 stage charging curve

MODEL	Description	Vboost	Vfloat	CC (default)	
12V	Default, programmable	14.4	13.8		
	Pre-defined, gel battery	14	13.6	100A	
	Pre-defined, flooded battery 14.2 13		13.4	TOUA	
	Pre-defined, AGM battery	14.5	13.5		
	Default, programmable	28.8	27.6		
24V	Pre-defined, gel battery 28 27.2 Pre-defined, flooded battery 28.4 26.8		27.2	55A	
			26.8		
	Pre-defined, AGM battery	29	27		
48V	Default, programmable	57.6	55.2		
	Pre-defined, gel battery 56		54.4	27.5A	
	Pre-defined, flooded battery	56.8	53.6	21.5A	
	Pre-defined, AGM battery	58	54		

#### 3. Remote ON-OFF Control

The charger can be turned ON/OFF individually or along with other units in parallel by using the "Remote ON-OFF" function.

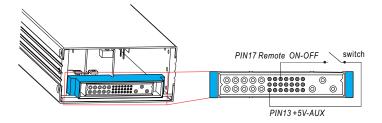



Between Remote ON-OFF and +5V-AUX	Charger Status
Switch Short	ON
Switch Open	OFF



#### 5. Output Voltage Programming (or, PV / remote voltage programming / remote adjust / margin programming / dynamic voltage trim)


In addition to the adjustment via the built-in potentiometer, the output voltage can be trimmed to 75~125% of the nominal voltage by applying EXTERNAL VOLTAGE.

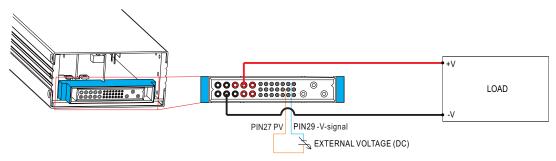


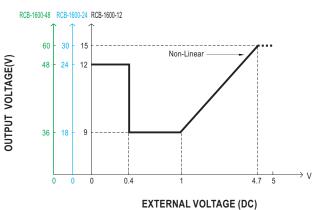


#### 6. Output Current Programming (or, PC / remote current programming / dynamic current trim)

% The output current can be trimmed to 20~100% of the rated current by applying EXTERNAL VOLTAGE.

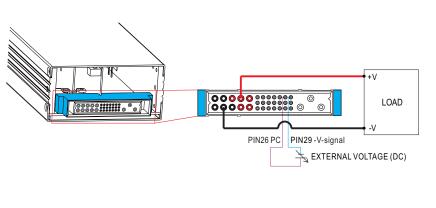

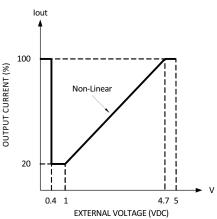


#### 7. Temperature Compensation

 

- To exploit the temperature compensation function, please attach the temperature sensor, NTC, to the battery or the battery's vicinity.
- The charger is able to work normally without the NTC.




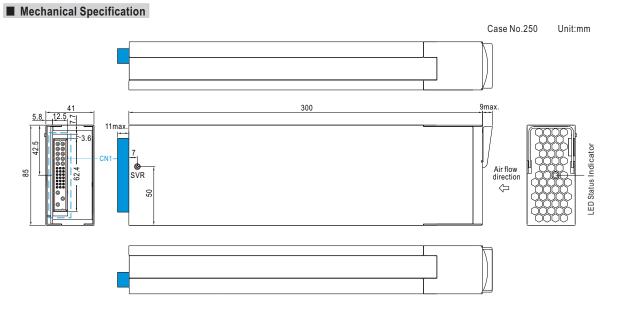

#### **※ LED Status Indicators**

LED	Description
Green	Float (stage 3)
Orange	Charging (stage 1 or stage 2)
Red	The LED will present a constant red light when the abnormal status (OTP, OLP, fan fail and charging timeout) arises.
Red (Flashing)	The LED will flash with the red light when the internal temperature reaches $60^{\circ}$ C; under this condition, the unit still operates normally without entering OTP. (In the meantime, an alarm signal will be sent out through the PMBus interface.)
 
#### ※ Input / Output Connector Pin No. Assignment(CN1): Postronic PCIM34W13M400A1



Mating Housing Postronic PCIM34W13F400A1

Pin No.	Function	Description	
1,2,3,4,6	-V	Negative output terminal.	
5,7,8,9,10	+V	Positive output terminal.	
11	+12V-AUX	Auxiliary voltage output, 10.8~13.2V, referenced to GND-AUX (pin 12). The maximum load current is 0.8A. This output has the built-in "Oring diodes" and is not controlled by the Remote ON/OFF control.	
12	GND-AUX	Auxiliary voltage output GND. The signal return is isolated from the output terminals (+V & -V).	
13	+5V-AUX	Auxiliary voltage output, 4.5~5.5V, referenced to GND-AUX (pin 12). The maximum load current is 0.3A. This output has the built-in "Oring diodes" and is not controlled by the Remote ON/OFF control.	
14	SCL	Serial Clock used in the PMBus interface. (Note.2)	
15	SDA	Serial Data used in the PMBus interface. (Note.2)	
16	T-ALARM	High (4.5 ~ 5.5V): When the internal temperature exceeds the limit of temperature alarm, or when fan fails.  Low (-0.1 ~ 0.5V): When the internal temperature is normal, and when fan normally works.  The maximum sourcing current is 10mA and only for output(Note.2)	
17	Remote ON-OFF	The unit can turn the output ON/OFF by electrical signal or dry contact between $Remote ON/OFF$ and $+5V-AUX$ . (Note.2) Short $(4.5 \sim 5.5V)$ : Power ON; Open $(0 \sim 0.5V)$ : Power OFF; The maximum input voltage is 5.5V.	
18	DC-OK	High $(4.5 \sim 5.5 V)$ : When the Vout $\leq 8V/16V/32V \pm 1V$ . Low $(-0.1 \sim 0.5 V)$ : When Vout $\geq 8V/16V/32V \pm 1V$ . The maximum sourcing current is 10mA and only for output. (Note.2) <i>DC OK</i> is associated with battery low protection.	
19	AC-OK	High (4.5 ~ 5.5V): When the input voltage is ≧87Vrms.  Low (-0.1 ~ 0.5V): When the input voltage is ≦75Vrms.  The maximum sourcing current is 10mA and only for output. (Note.2)	
20	D0	Charging mechanism control. This pin determines, for charging operation, whether charging curve is used, or control over PMBus, PV/PC or SVR is used. Please refer to the installation Manual. (Note.1)	
21,22,23	A2,A1,A0	PMBus interface address lines. (Note.1)	
24,25	DB,DA	Differential digital signal for parallel control. (Note.1)	
26	PC	Connection for output current programming. (Note.1)	
27	PV	Connection for output voltage programming. (Note.1)	
28	+V(signal)	Positive output voltage signal. It cannot be connected directly to the load.	
29	-V(signal)	Negative output voltage signal. It is for certain function reference; it cannot be connected directly to the load.	
30	RTH+	Townsorting ages of admitted the temperature company of the first of t	
31	RTH-	Temperature sense associated with the temperature compensation funcion.	
32	FG	AC Ground connection.	
33	AC/L	AC Line connection.	
34	AC/N	AC Neutral connection.	

Note1: Non-isolated signal, referenced to [-V(signal)]. Note2: Isolated signal, referenced to GND-AUX.