

Total - Reset:

SE


Func 3

SE

Func 1

SE → F+9

Bank 2

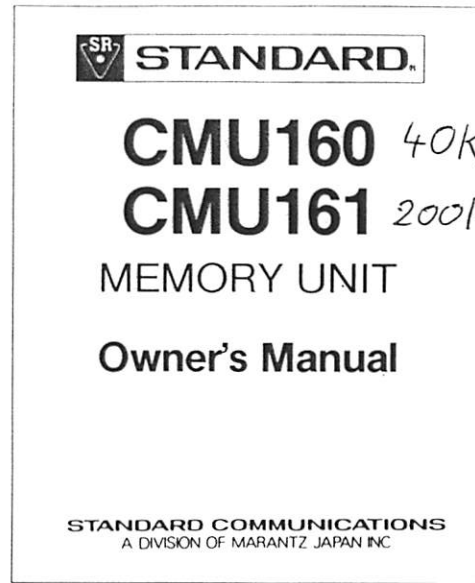

Printed in Japan

154X851212

Thank you for purchasing the CMU160/CMU161 Memory Unit.

The CMU160/CMU161 Memory Unit is designed exclusively for use with the C168/C468. Please install the Memory Unit according to the procedure described in the following.

Tools to be prepared


Tool with a thin tip, such as a pair of tweezers.

Precautions before installation


- 1 Be sure to switch the power of the transceiver OFF before installing the CMU160/CMU161 on it.
- 2 When inserting a tip of tweezers into the round hole on the CMU160/CMU161, be careful not to insert it too deep. Otherwise, the CMU160/CMU161 may be damaged.
- 3 When attaching the CMU160/CMU161, be sure to plug its connector securely until the deep. Otherwise, malfunction or failure may result.
- 4 Be careful never to install the CMU160/CMU161 in a reverse manner. Otherwise, the CMU160/CMU161 will be damaged.

Installation procedure


- 1 Remove the battery case from the transceiver.

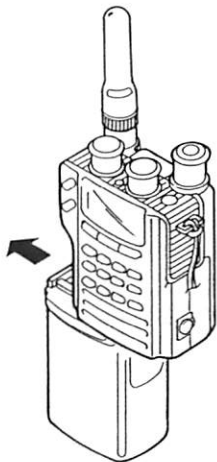

- 2 Detach the CMU160/CMU161 which has already been installed on the transceiver. To detach, insert a tip of tweezers into the round hole on the CMU160/CMU161 and pull it out as shown in the illustration.

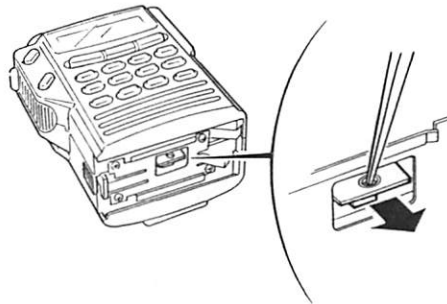

- 3 Attach the CMU160/CMU161 onto the transceiver. To attach, hold the CMU160/CMU161 with the surface on which the components are not mounted facing upward and plug it straight as shown in the illustration.

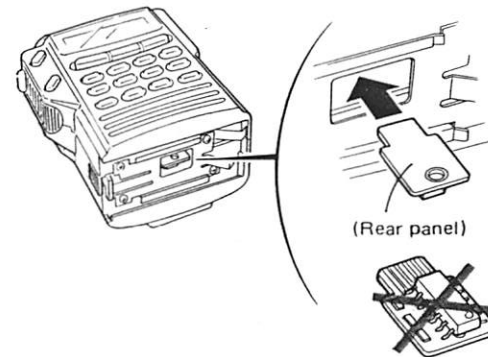

Resetting

When the memory unit is installed in C168 and power is supplied, the frequency is set to 433.00 MHz and its display blinks. At that time, reset the unit as follows.

Once the presetting is carried out, it is not necessary to reset again. When the memory unit is installed in C468, resetting is not necessary. For details, refer to page 55 of the Instruction Manual.

Procedures

- 1 Set the unit to set mode.
- 2 While pressing the FUNC key, press the 3 SFT key.
A dot is displayed at the lower left corner (right under the memory address 1) and the unit enters all reset access mode.
- 3 Set the unit to set mode again.
- 4 While pressing the FUNC key, press 1 P0 key.

日本マランツ株式会社

本社 〒228 神奈川県相模原市相模大野7丁目35番1号
営業本部 〒150 東京都渋谷区恵比寿南1丁目11番9号

SR STANDARD.

CMU160 CMU161

メモリーユニット

取扱説明書

日本マランツ株式会社

Printed in Japan

154×851213

この度は、メモリーユニットCMU160/
CMU161をお買い上げいただきましてあ
りがとうございました。

メモリーユニットCMU160/CMU161は
C160/C460およびC550専用です。手順に
添って正しく取り付けてください。また、
C550にご使用の際はC550取扱説明書を
ご覧ください。

用意する工具


ピンセット等先の細い物。

取り付け前の注意


- ①CMU160/CMU161を無線機に取り付け
る時は、必ず無線機の電源スイッチを
OFFにしてください。
- ②CMU160/CMU161の丸穴にピンセット
を差し込む時、あまり深く差し込まない
てください。
CMU160/CMU161が破損することが
あります。
- ③CMU160/CMU161を、コネクターの奥
まで差し込んでください。
確実に差し込まないと誤動作および、故
障の原因になります。
- ④メモリーユニットの面を反対にして取り
付けると、本体のコネクターが破損しま
す。絶対逆に取り付けしないでください。

取り付け手順


- ①無線機からバッテリーケースを外します。

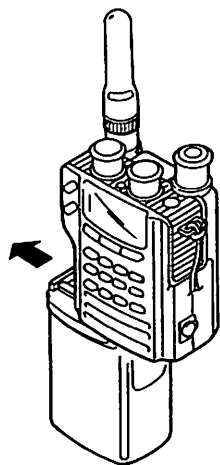

- ②既に、無線機に取り付けられている CMU 160/CMU161 を外します。図のように、CMU160/CMU161 の丸穴にピンセットの先を軽く入れ、引き出してください。

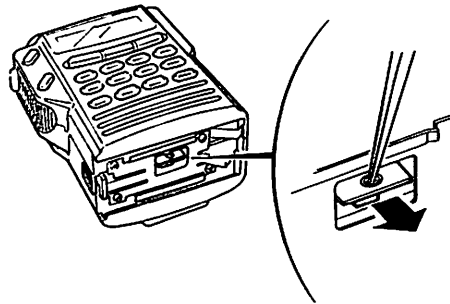

- ③無線機に CMU160/CMU161 を差し込みます。図のように、部品が取り付けられていない面（裏面）を上にし、真っ直ぐ差し込んでください。

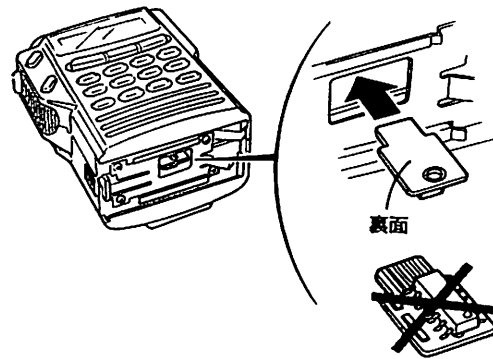

リセット法

お買い上げ直後のメモリーユニットをC160に装着して電源をONにすると、周波数表示が433.00MHzとなり、点滅します。詳細は、取扱説明書54ページの手順を参照してください。リセット操作を一度行った後または、C460で御使用の際はリセット操作は不要です。
次の手順でリセット操作を行ってください。

手順

- ①セットモードにします。
- ②FUNCキーを押しながら3SFTキーを押します。
表示部、左下（メモリーアドレスの1の位が表示される右下）にドットが表示されて、オールリセット受け付け可能になります。
- ③再びセットモードにします。
- ④FUNCキーを押しながら1POキーを押します。